

DK T7 Compliant, Audio, Loudness & Logging System – Quick Sheet

Change Scale & Loudness Setup

Touching the scale area allows access to Scale setup, Loudness Setup and Display mode (Moving Coil or Bargraph)

Meter Source Select

Touch the legend of the meter sources, to open and select from the list of input sources. Sources may be named to your liking.

Bar Graph Options

Change colours, Over/Normal/Under levels. Assign 'Type' to specify what role the bargraph represents e.g. Left, Right or other.

StarFish, Phase & TC Setup

Touch the Goniometer section to setup change StarFish setup.

Choose your time-code source.

DK Logging Application

DK T7 includes complete Loudness & True Peak Logging Application that may be downloaded **free of charge** from:

www.dk-technologies.com

Exiting a Menu

Exit any menu by hitting the Menu Headline box..



Text Read Outs

Touch the Text read outs to setup specific parameters viewed in the Text Field

Naming Presets

Open Preset List.

Press & Hold 'Preset name' for 3 secs to name preset.

Select / Customise

Press button for selecting function.

Press & Hold for 3 secs to change the function of the button.

Slide between three button sets.

Select / Customise

Press button for selecting function.

Press & Hold for 3 secs to change the function of the button.

Slide between three button sets: 'Loudness' – 'Preset' – 'Main'

